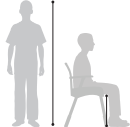


Compass Chair dimensions

User dimensions (inches)	R310 size 1	R320 size 2	R330 size 3	R340 size 4	R350 size 5
Height	36 – 43	43 – 48	48 – 55	55 – 63	63+
Knee to heel	9 – 11	10½ – 12½	12½ – 14½	14½ – 16½	16½ – 18½
 <p>Key user dimension: height / knee to heel The user's overall height and measurement from knee to heel is a general guide to help you select the appropriate chair. Choose the model that allows for growth.</p> <p>Important: Make sure that seat width, depth and height are adequate for each user, and that the user's weight does not exceed the maximum working load.</p>					
Item dimensions (inches)	R310	R320	R330	R340	R350
Seat height	9, 10, 11	10½, 11½, 12½	12½, 13½, 14½	14½, 15½, 16½	16½, 17½, 18½
Seat depth	9½	11	12¾	14¾	16½
Seat width	10½	12¼	14	16¼	18¼
Backrest height	9½	11	12½	14¼	16
Armrest height above the seat	5½	6	7	8¼	8¾
Armrest length	6½	7½	8½	9¾	11
Max. working load (lb)	100	120	175	220	250

2023 order form

Use dimension chart to select appropriate size.

	R310 size 1		R320 size 2		R330 size 3		R340 size 4		R350 size 5	
* Compass chair	R311	\$335 <input type="checkbox"/>	R321	\$365 <input type="checkbox"/>	R331	\$395 <input type="checkbox"/>	R341	\$425 <input type="checkbox"/>	R351	\$455 <input type="checkbox"/>
Seat belt	R312	\$45 <input type="checkbox"/>	R312	\$45 <input type="checkbox"/>	R332	\$45 <input type="checkbox"/>	R342	\$45 <input type="checkbox"/>	R342	\$45 <input type="checkbox"/>
Stability feet	R316	\$65 <input type="checkbox"/>	R316	\$65 <input type="checkbox"/>	R316	\$65 <input type="checkbox"/>	R316	\$65 <input type="checkbox"/>	R316	\$65 <input type="checkbox"/>
New! Pelvic harness	R313	\$160 <input type="checkbox"/>	R323	\$170 <input type="checkbox"/>	R333	\$180 <input type="checkbox"/>	R343	\$190 <input type="checkbox"/>	R353	\$200 <input type="checkbox"/>
Total	R310	\$ _____	R320	\$ _____	R330	\$ _____	R340	\$ _____	R350	\$ _____

* Required